


INK cartridges INK cartridges INK cartridges

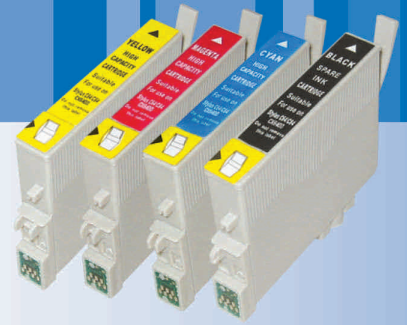

INKJET CARTRIDGES

Our Code		OEM Code	Colour	Printer Compatibility
PE-97C		S020097		Epson Stylus Color II/S, 820, 1500/H, MJ-1500K
PE-108B		S020108		Epson Stylus PRO, PRO XL/+, Stylus Color
PE-187B		S020187		Epson Stylus PRO, PRO XL/+, Stylus Color
PE-191C		S020191		Stylus 1500, Stylus Color 1500
PE-193C		S020193		Epson Stylus 400, 800, 800+, 1000, 1000A3
PE-189B		S020189		Epson Stylus Color 300
PE-110C		S020110		Epson Stylus PHOTO: PHOTO, 700, 710, EX
PE-Q13B		S020093 S020187 T013401		COMBINING THE 093 + 187 + T013 (ALL-IN-ONE COMBO)

Our Code		OEM Code	Colour	Printer Compatibility
PE-Q14C		S020089 S020191 T014401	 COMBO	COMBINING THE 089 + 191 + T014 (ALL-IN-ONE COMBO)
PE-Q19B		S020189 S020108 T019401	 COMBO	COMBINING THE 189 + 108 + T019 (ALL-IN-ONE COMBO)
PE-Q110C		S020193 S020110	 COMBO	COMBINING THE 193 + 110 (ALL-IN-ONE COMBO)
PE-001C		T015401		Epson Stylus Photo 1200
PE-003B		T003011		Epson Stylus Color 900, 900N/G, 950, 980
PE-005C		T005011		Epson Stylus Color 900, 900N/G, 950, 980
PE-007B		T007401		Epson Stylus Photo 790, 870, 870SE, 875DC, 890, 895, 900, 915, 1270, 1290/S
PE-008C		T008401		Epson Stylus Photo 790, 870, 870SE, 875DC, 890, 895, 915

Our Code		OEM Code	Colour	Printer Compatibility
PE-009C		T009401		Epson Stylus Photo 900, 1270, 1290, 1290/S
PE-013B		T013401		Epson Stylus Color 480, 580, C20, C40
PE-014C		T014401		Epson Stylus Color 480, 580, C20, C40
PE-015B		T015401		Epson Stylus Photo 2000P
PE-016C		T016401		Epson Stylus Photo 2000P
PE-017B		T017401		Epson Stylus Color 680, 685, 777/i
PE-018C		T017401		Epson Stylus Color 680, 685, 777/i
PE-019B		T019401		Epson Stylus Color 880 / 880i

Our Code		OEM Code	Colour	Printer Compatibility
PE-020C		T020401		Epson Stylus Color 880 / 880i
PE-025B		T025401		Epson Stylus 400, 800, 800+, 1000 NB: NOT A COLOUR STYLUS
PE-026B		T026401		Epson Stylus Color C50, PHOTO 810, 820, 830, 925, 935
PE-027C		T027401		PHOTO 810, 820, 830, 925, 935
PE-028B		T028401		Epson Stylus Color C60, C61
PE-029C		T029401		Epson Stylus Color C50, C60
PE-T036B		T036140		Epson Stylus Color C42, C44, C46
PE-T037C		T037040		Epson Stylus Color C42, C44, C46

Our Code		OEM Code	Colour	Printer Compatibility
PE-T038B		T03814A	●	Epson Stylus Color C41, C43, C45
PE-T039C		T03904A	● ● ● ● ●	Epson Stylus Color C41, C43, C45
PE-T040B		T040140	●	Epson Stylus Color C62, CX3200
PE-T041C		T041040	● ● ● ● ●	Epson Stylus Color C62, CX3200
PE-321B		T032140	●	Epson Stylus Color C70, C80, C82, CX5200, CX5400
PE-322C / 323M / 324Y		T032240 T032340 T032440	● ● ● ● ●	Epson Stylus Color C70, C80
PE-T422C / T423M / T424Y		T042240 T042340 T042440	● ● ● ● ●	Epson Stylus Color C82, CX5200, CX5400
PE-T0431B		T043140	●	Epson Stylus C84, C84 Photo Ed, C86, C86 Photo Ed, CX3600, CX6400, CX6600

Our Code	OEM Code	Colour	Printer Compatibility
PE-T0442C / T0443M / T0444Y	T044240 T044340 T044440		Epson Stylus C84, C84 Photo Ed, C86, C86 Photo Ed, CX3600, CX6400, CX6600, C64, C64 Photo Ed, C66
PE-T0441B	T044140		Epson Stylus C64, C64 PE, C66, C84, C84 PE, C86 C86 PE, CX3600, CX6400, CX6600
PE-T0452C / T0453M / T0454Y	T045240 T045340 T045440		Epson Stylus C64, C64 PE, C66, C84, C84 PE, C86 C86 PE, CX3600, CX6400, CX6600
PE-T461B / T472C / T473M / T474Y	T04614A T04724A T04734A T04744A		Epson Stylus Color C63, C83, C83 PE
PE-T481B / T482C / T483M / T484Y / T485PC T486PM	T048120 T048220 T048320 T048420 T048520 T048620		Epson Stylus Photo R200, R300, R300 ME, R500 RX500, RX600
PE-T540WF / T541B / T542C / T543M / T544Y / T547R / T548MB T549BL	T054020, T054120, T054220, T054320, T054420, T054720, T054820, T054920		Epson Stylus Photo R800
PE-331B / 332C / 333M / 334Y / 335LC / 336LM	T033140 T033240 T033340 T033440 T033540 T033640		Epson Stylus Photo 950, 960
PE-T0491B / T0492C / T0493M / T0494Y / T0495LC / T0496LM	T0491 T0492 T0493 T0494 T0495 T0496		Epson Stylus Photo R210, R230, R350, RX510, RX630

Our Code		OEM Code	Colour	Printer Compatibility
PE-T557		T557040		PICTURE MATE, DELUXE VIEWER EDITION; EXPRESS EDITION
PE-T0551B PE-T0552C PE-T0553M PE-T0554Y		T055140 T055240 T055340 T055440		Epson Stylus R240, 245. RX420, RX425, 520
PE-T0561B PE-T0562C PE-T0563M PE-T0564Y		T0561 T0562 T0563 T0564		Epson Stylus PHOTO R250, RX430, RX530
PE-T0611B-HC PE-T0611B PE-T0612C PE-T0613M PE-T0614Y		OUR OWN PRODUCT T061140 T061240 T061340 T061440		Epson Stylus D68 PE, D88, D88 PHOTO, DX3800, DX3850, DX4800, DX4850
PE-T0621B-HC PE-T0631B PE-T0632C PE-T0633M PE-T0634Y		OUR OWN PRODUCT T06314A T06324A T06334A T06344A		Epson Stylus C67, C87, CX3700, CX4100, CX4700
PE-T066B PE-T067C		T066140 T067140		Epson Stylus C48
PE-T0601B PE-T0602C PE-T0603M PE-T0604Y		T0601 T0602 T0603 T0604		Epson Stylus C88
PE-118B PE-122Y PE-130C PE-126M		S020118 S020122 S020130 S020126		Epson Stylus: COLOUR 3000, PRO 5000, PROOFER 5000, MJ-8000C COLOUR 3000, MJ-8000C